

# INSTALLATION & USER INSTRUCTIONS

## DAN DRYER® ELEGANCE HAIR DRYER TYPE 714

Enclosed with the hair dryer are the installation instructions as well as a small plastic bag containing:

- 4 pcs. screws
- 2 pcs. rawlplugs
- 2 pcs. plastic cap
- 1 pcs. plastic hanger

### COMPONENTS:

1. Dryer unit
2. Activation button
3. Switch for air temperature setting
4. Holder
5. Shaver plug (110 / 230 V)
6. Base plate

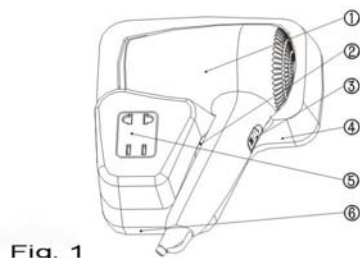


Fig. 1

### PRIOR TO INSTALLATION:

Before installing the hair dryer, please check that the network has sufficient capacity to handle the extra wattage specified on the handle of the dryer.

Be sure to install the hair dryer in adequate safety distance from bath tub and shower.

The hair dryer is double-insulated and thus needs no earth connection.

### INSTALLATION VIA PLUG SWITCH:

- ❶ Mark and drill 2 holes, 125 mm apart, as shown in Fig. 2. Use 6 mm drill. Insert the enclosed dowels into the holes and fix the plastic hanger enclosed in the upper screw hole.
- ❷ Slide the base plate of the holder in place onto the hanger, thus attaching the base plate. Fix the holder onto the wall and

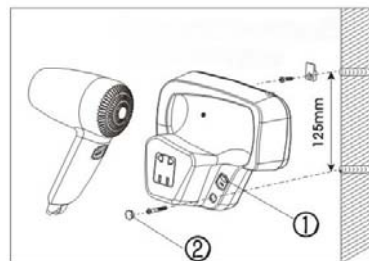


Fig. 2

cover the lower screw hole with the cap marked ❷ in Fig. 2.

- ❸ The unit is ready for use when plugged in, and when the power switch is in ON position.

### FIXED INSTALLATION – ON WALL OR IN DRAWER:

- ❶ Mark and drill 2 holes, 125 mm apart, as shown in Fig. 2. Use 6 mm drill. Insert the enclosed dowels into the holes and fix the plastic hanger enclosed in the upper screw hole.



Fig. 3

**PLEASE NOTE:** When installing the dryer in a drawer, drill 2 holes as shown in Fig. 5. Use 4 mm drill. Drill hole for cable entry at the back of the drawer.

- ❷ Loosen the screws marked on Fig. 3 and remove the front of the holder.
- ❸ Disconnect the power cable that came with the dryer from the terminal block.

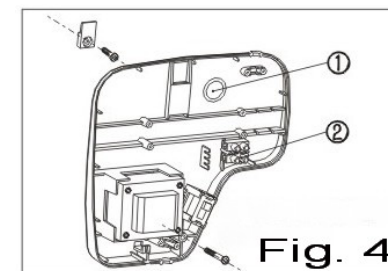


Fig. 4

- ❹ Press to remove the plastic bit marked ❶ on Fig. 4 to create hole for cable entry. Feed the cable from the wall through the hole slide the base plate of the holder in place onto the hanger, thus attaching the base plate. Connect cable to terminal block (marked ❷ on Fig. 4). Fix the unit onto the wall using one of the enclosed screws.

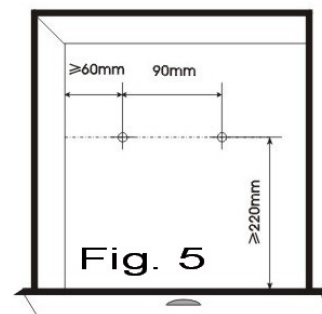


Fig. 5

**PLEASE NOTE:** For drawer installation, fix holder directly at the bottom of the drawer using the two screw holes placed horizontally in the base plate of the holder. Do not use the enclosed plastic hanger. Feed the cable from the wall through the hole at the top of the holder and connect to terminal block.

- ❺ Replace the plastic cap marked ❷ on Fig. 2 to cover the lower screw hole; then reassemble the front of the holder.
- ❻ The unit is ready for use when plugged in, and ON position.

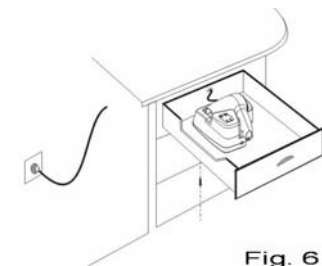


Fig. 6

## USER INSTRUCTIONS:

- When the power switch is in ON position, lift dryer and grip firmly round the activation button to activate.
- Air volume as well as temperature is adjustable. The switch placed on the back side of the handle alternates between MAX. (1200 W) and MIN. (540 W).
- Avoid directing the airflow towards your eyes.
- Do not cover air inlet / air outlet.
- Keep the dryer at safe distance from your hair to avoid hair getting stuck in the air inlet.
- Return the power switch to OFF position after use.

## MAINTENANCE:

- Leave dryer in OFF position during cleaning.
- Clean plastic parts with a wrung cloth.
- Do not use corrosive cleaning products.

## IMPORTANT!

This product is covered by the WEEE regulations on the recycling and recovery of waste electrical and electronic equipment.

- This product is not to be treated as household refuse.
- This product must be recycled if possible.
- Contact local authorities for advice.
- The product may also be returned to the manufacturer/distributor free of charge. The manufacturer/distributor will ensure proper recycling/disposal.



# INSTALLATION & USER INSTRUCTIONS

## DAN DRYER® ELEGANCE HAIR DRYER TYPE 714



# DAN DRYER A/S

Alsikevej 8 • DK-8920 Randers NV • Tel.: +45 86 41 57 11 • Fax: +45 86 41 60 89